

(19)



Europäisches Patentamt
European Patent Office
Office européen des brevets

(11) Publication number:

0 367 388
A1

(12)

EUROPEAN PATENT APPLICATION

(21) Application number: 89308837.7

(51) Int. Cl.⁵: B66B 5/00


(22) Date of filing: 31.08.89

(30) Priority: 31.10.88 US 264566

(43) Date of publication of application:
09.05.90 Bulletin 90/19(64) Designated Contracting States:
BE CH DE ES FR GB IT LI(71) Applicant: OTIS ELEVATOR COMPANY
10 Farm Springs
Farmington, CT 06032(US)(72) Inventor: Schienda, Gregory A.
181 Olson Drive
Southington, CT 06486(US)
Inventor: Mayfield, Mark L.
489 Wolcott Street Unit 71
Bristol, CT 06010(US)(74) Representative: Tomlinson, Kerry John et al
Frank B. Dehn & Co. European Patent
Attorneys Imperial House 15-19 Kingsway
London WC2B 6UZ(GB)

(54) Elevator diagnostic monitoring apparatus.

(57) Apparatus (10) is connected by way of a serial communication link (13) to at least one computer-based elevator controller (14-21) in order to monitor the diagnostic output of each connected controller. The diagnostic output of a controller is determined in a manner by which the elevator system is modeled as normally operating sequentially from state to state in a closed loop sequence of linked operating states. Any deviations from this sequence generate diagnostic messages that are communicated from the controller to the monitoring apparatus. Also communicated are the last to occur of a plurality of parameter signal state changes. The monitoring apparatus processes the diagnostic signals for visual (29) and/or hard copy (32) display to interested elevator personnel in a meaningful way. Further, the monitoring apparatus provides a plurality of signals to the elevator controller indicative of corresponding reference standards that the elevator controller utilizes in determining the occurrence of certain elevator event conditions.

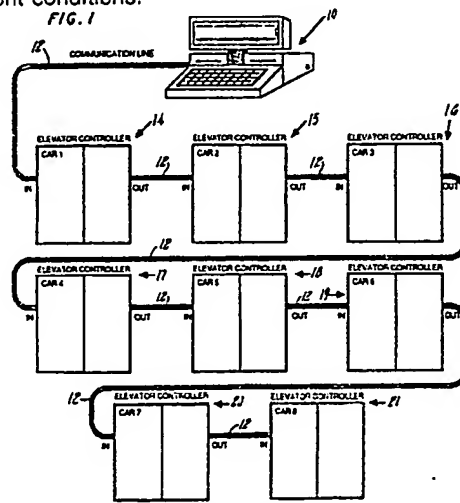

Xerox Copy Centre

EP 0 367 388 A1

Each elevator controller 14-21 contains software that controls the operation of the elevator car and also implements enhanced elevator diagnostics as disclosed in the aforementioned commonly-owned U.S. Patent No. 4,750,591 to Coste et al. There, a method and apparatus for monitoring an elevator is disclosed in which the elevator car is modeled as operating in a closed loop chain of normal operating states. The controller monitors the states of a plurality of two-state parameter signals, each signal being indicative of one of a corresponding plurality of elevator parameters. The identity of a car operating state is determined by detecting the satisfaction of a criterion defining a transition either from an immediately preceding operating state or to an immediately succeeding operating state. The transition detection is accomplished by detecting the parameter signal state or states, alone or in combination, of one or more of the sensed parameter signals that define the satisfied transition criterion, each criterion indicating either a transition to a normal operating state in the sequence of states or to an abnormal operating state. The elevator controller provides selected message signals in the presence of corresponding selected transitions. A selected number of the most recent to occur of certain parameter signal state changes are stored in an event buffer and provided as part of the selected message signals.

As a result of the monitoring of elevator operation, the controller software records significant parameter signal state changes and analyzes these changes for indication of performance data, alarms, and alerts. Such analysis provides error recognition by comparing actual event sequences to predefined valid event sequences that are normal to elevator control. Deviations from the pre-defined sequences invoke the alarm condition, alert condition, and some system usage accounting messages. Other system usage accounting messages are integral to normal event sequences. Performance data consists of data such as number of runs and number of door operations. An alarm message is associated with certain shutdown conditions where a passenger may be trapped in the car. An alert message is an indication that the elevator is operating below performance standards.

Also provided as a part of alarms and alerts are the contents of an event buffer, located inside the controller, that stores the last one hundred or so significant events (i.e., significant parameter signal state changes) leading up to the reported alarm or alert condition. The storing of the last one hundred events monitored is particularly advantageous for trouble shooting purposes.

Monitoring an elevator car according to an operating state model together with storing the most recent of selected event occurrences provides a powerful method of diagnosing elevator problems.

In an exemplary embodiment of the aforementioned Coste et al patent, the monitoring of an elevator system according to the state machine model is accomplished by a computer-based elevator controller. Once transition-significant parameter signals are detected and recorded by the controller, they are analyzed for the presence of significant events such as alarm conditions, sub-standard performance conditions (alerts), and system usage performance conditions. Diagnostic messages indicative of these conditions are then communicated outside of the particular controller to the computer 10 for manifestation to elevator personnel. Communication of diagnostic messages indicative of problem conditions to an external computer provides an improved method of troubleshooting computer-based elevator controllers.

Fig. 2 is a block diagram of the computer of Fig. 1. The communication link 12 connecting the elevator controllers 14-21 together is also connected to communication means 25 inside the computer 10. The communication means 25 are typically implemented with readily-available dedicated digital line driver and receiver integrated circuits marketed by well-known companies such as Texas Instruments or Motorola. The communications means 25 are used to receive the messages indicative of enhanced elevator diagnostic information transmitted over the communication line 12 from any one of the elevator controllers 14-21. Once received, the communication means 25 decodes the message signals and provides signals indicative of the decoded messages to a central processing unit (CPU) 27. The CPU is typically implemented with any well-known microprocessor integrated circuit (IC), such as the Intel Model 80188 microprocessor, together with optional support ICs (e.g., interrupt controller, direct memory access controller, etc.).

Table III of the aforementioned Coste et al patent, incorporated herein as Table I, lists exemplary messages transmitted to the computer 10 in response to the diagnosis of certain elevator conditions. For example, assume a typical sequence of elevator operating states (reference Fig. 4(a) of the the aforementioned Coste et al patent) where the elevator car has stopped at a landing, the doors are closed, and a door open command has been received by the elevator controller. The reception of the door open command transitions the elevator controller software to proceed from a no door open command state (S0) to a state (S1) where the doors are opening and the door fully closed parameter signal is off. The next normal operating state (S2) is that of the condition where the doors are partially open and are continuing to open in response to the door open command. Once the doors are fully open, a transition is made to a state (S3) indicative of the doors being fully open and the elevator controller is anticipating a door close command.

TABLE I

SHUTDOWN MESSAGES (TYPE 01)

SUB-TYPE	DEFINITION	DATA WORD 1	DATA WORD 2	DATA WORD 3	DATA WORD 4	DATA WORD 5
1	Trapped passenger	Committable landing	Car at landing	Car stall protect	REM state	Safe
2	Trapped passenger malfunction doors	Committable landing	Car at landing	Car stall protect	REM state	Safe
3	Stalled car	Committable landing	Car at landing	Car stall protect	REM state	Safe
4	Stalled car malfunction doors	Committable landing	Car at landing	Car stall protect	REM state	Safe
5	Stalled car door stuck	Committable landing	Car at landing	Car stall protect	REM state	Safe

TABLE I

SHUTDOWN MESSAGES (TYPE 01)

SUB-TYPE	DEFINITION	DATA WORD 1	DATA WORD 2	DATA WORD 3	DATA WORD 4	DATA WORD 5
6-10	Condition resolved back in service	Committable landing	Car at landing	Car stall protect	REM state	Safe
11	Back in service by power cycled	TSK000	INT000	SIRT00, SIRT01	LST000, LST001	STACK POINTER
12	Car not responding	Committable landing	Car at landing	Car stall protect	REM state	Safe
13	Trapped passenger car not responding	Committable landing	Car at landing	Car stall protect	REM state	Safe

TABLE I
SHUTDOWN MESSAGES (TYPE 01)

SUB-TYPE	DEFINITION	DATA WORD 1	DATA WORD 2	DATA WORD 3	DATA WORD 4	DATA WORD 5
14	Frequent safety chain failures	Committable landing	Car at landing	Car stall protect	REM state	Safe
15	Frequent door open failures	Committable landing	Car at landing	Car stall protect	REM state	Safe
16	ECS not running (generated by external computer)	Committable landing	Car at landing	Car stall protect	REM state	Safe
17	REM buffer overrun	Committable landing	Car at landing	Car stall protect	REM state	Safe
18	Operator interrupt	Committable landing	Car at landing	Car stall protect	REM state	Safe

TABLE 1

MAINTENANCE MESSAGES (TYPE 02)

SUB-TYPE	DEFINITION	DATA WORD 1	DATA WORD 2	DATA WORD 3	DATA WORD 4	DATA WORD 5
1	Deceleration time limit exceeded	Number of occurrences	Limit	Last failure time	Landing of last occurrence	
2	Excessive nudges	Number of occurrences	Number of nudges	Number door operations	Limit	
3	Door close time limit	Number of occurrences	Limit	Last failure time	Landing of last occurrence	
4	Excessive nudges exceeded	Number of occurrences	Number of nudges	Number door operations	Limit	
5	Rear close time limit exceeded	Number of occurrences	Limit	Last failure time	Landing of last occurrence	

TABLE I

MAINTENANCE MESSAGES (TYPE 02)

SUB-TYPE	DEFINITION	DATA WORD 1	DATA WORD 2	DATA WORD 3	DATA WORD 4	DATA WORD 5
6	Run time between landings exceeded	Number of occurrences	Limit	Last failure time	First landing	Second landing
28	High pit oil	Number of occurrences				
29	Spare					
30	Door open time limit exceeded	Number of occurrences	Limit	Last failure time	Landing of last occurrence	
31	Rear open time limit exceeded	Number of occurrences	Limit	Last failure time	Landing of last occurrence	

TABLE 1

MAINTENANCE MESSAGES (TYPE 02)

SUB-TYPE	DEFINITION	DATA WORD 1	DATA WORD 2	DATA WORD 3	DATA WORD 4	DATA WORD 5
32	Failure of doors to open detected	Number of occurrences	Landing of last occurrence	REM state	Emergency stop	
33	Failure of rear doors to open detected	Number of occurrences	Landing of last occurrence	REM state	Emergency stop	
34	Malfunction door switches	Number of occurrences	Landing of last occurrence	REM state	Emergency stop	
35	Spare					
36	Rear lock bounce	Number of occurrence	Landing of last occurrence			

TABLE I

MAINTENANCE MESSAGES (TYPE 02)

SUB-TYPE	DEFINITION	DATA WORD 1	DATA WORD 2	DATA WORD 3	DATA WORD 4	DATA WORD 5
37	Front lock bounce	Number of occurrences	Landing of last occurrence			
38	Safety chain break	Number of occurrences	Landing of last occurrence			
39	Run aborted	Number of occurrences	Landing of last occurrence	REM state	Emergency stop	Motion detected
40	Invalid change in committable position	Number of occurrences	Landing of last occurrences			
41	Invalid inductor sequence	Number of occurrences	Landing of last occurrence	REM state		

TABLE I
PERFORMANCE DATA (TYPE 03)

SUB-TYPE	DEFINITION	DATA WORD 1	DATA WORD 2	DATA WORD 3	DATA WORD 4	DATA WORD 5
1	Front door information	Front door operations	Front door reversals	Front door nudges	Front door close exceedances	Number of runs
2	Rear door/ information	Rear door operations	Rear door reversals	Rear door nudges	Rear door close exceedances	
3	Run information	Demand minutes	Running minutes	Relevels		
4	For eleevonic	Empty runs up	Empty runs down	Partial runs up	Partial runs down	
5	For eleevonic	Full runs up	Full runs down			

55 Upon receiving a door close command, a transition is made to a state (S4) in which the doors are partially open and are closing in response to the close command. Once the doors are fully closed and no door open command is present, a transition is made to a corresponding state (S5). Then, when a door open command is received, a transition is made to the state (S1) in which the door open command has been received and the door fully closed parameter signal is off. This closed loop sequence of normal car door

operating states is the expected sequence for a normally operating elevator car.

Connected with certain ones of the state transitions are output functions performed by the elevator controller. For example, upon the transition from state S0 to state S1, a timer, implemented either in hardware or software, would have been started. Then, from the time the door open command is received in state S0, through intermediary states S1 and S2, until the time the door fully open condition is sensed in state S3, the timer is in operation. Once state S3 is reached, the timer value is compared to a preselected time limit for door opening. If the time limit is exceeded, then the elevator controller sends a selected maintenance request message over the communication link 12 to the communication means 25 inside the computer 10. For the particular situation just described, maintenance message sub-type number thirty (reference Table I) is sent. Also, additional data words are transmitted, such as the number of occurrences of this particular time limit exceedence along with information that describes the current time limit that the actual limit was compared against by the elevator controller, the last time that a failure occurred, and the landing of the last occurrence of a time limit exceedence. These transmitted data words indicative of enhanced elevator diagnostics are then processed by the CPU 27 either for display on a computer display 29 or for a hard copy printout generated by an externally-connected printer 32. For a laptop-type personal computer, the display 29 is typically implemented as an eighty-column by twenty-five-line character matrix using liquid crystal display technology. The printer 32 is connected by a communications link 34 to the communication means 25. The protocol used for printer communications is typically either that of the well-known RS232 serial type or that of the well-known Centronics parallel communications protocol. The printer can be that of a wide variety of well-known types (e.g., dot matrix, laser, etc.) made by a number of well-known manufacturers (Okidata, Epson, Toshiba, etc.). The data words transmitted over the communication link 12 from any elevator controller can also be stored in storage means 36 for future manipulation and reference. The storage means 36 are typically comprised of several types of electronic storage media: volatile random access memory (RAM) for temporary storage and manipulation by the CPU 27; magnetic storage in the form of floppy disk for non-volatile, transportable storage; magnetic hard disk storage for non-volatile, high-volume storage.

Normally, the apparatus of the present invention is intended to be used either during system installation, for periodic evaluation, or for problem site analysis. A typical operating sequence is as follows: elevator maintenance personnel physically locate the computer 10 and, optionally, the printer 32 in the elevator machine room, or in close proximity thereto. The computer 10 is connected to up to eight computer-based elevator controllers 14-21 by way of the communication link 12. Typically, an IBM laptop personal computer is supplied with at least one communication port implementing the RS232 protocol, and at least one communication port implementing the Centronics parallel protocol. The optional printer 32 connects directly to either a Centronics parallel port or to one of the RS232 serial ports on the IBM computer 10. Since typically RS422 protocol electronics are not supplied on an IBM personal computer, a commonly available RS232-to-RS422 adapter is plugged into one of the RS232 ports on the IBM computer, and the RS422 cable implementing the RS422 communication link 12 is plugged into the adapter.

Once the computer and printer are connected to the elevator controllers, the software program that controls the operation of the computer 10 is loaded into the computer 10. Typically, the software is provided on a floppy disk which is placed into the system floppy disk drive (i.e., the "A" drive) on the IBM computer 10. Also, a data floppy disk is loaded into a second disk drive (i.e., the "B" drive) on the IBM computer 10. Electrical power is then applied to the computer 10 and printer 32.

After powerup, the software offers the user a choice between a configuration program or a monitoring program. The configuration program is normally run when it is desired to enter the parameters of the elevator installation, or if the user is unsure of the configurations on file, or if it is desired to edit a configuration file. The monitoring program is normally run when the configuration file for the particular elevator installation has been established and the user desires to extract information from any connected elevator controllers. All display of data to the user for subsequent interpretation and/or interaction is presented by way of the display 29.

The type of information normally entered when running the configuration program includes the site name, building number, number of cars, and the machine number of each car. This information is entered by the user using keystroke entries made on a keyboard 38 of the IBM computer 10.

Another feature of the configuration program is that, in the aforementioned door open/close sequence example, the current door open time limit, that the actual door opening time limit is compared against, is one of a plurality of predetermined parameter limit values that can be selected by the user. The user can choose to modify default values for the limits of a number of typical elevator operational parameters, as listed in Table II along with the corresponding parameter definitions. The chosen default values are entered interactively by the user using the keyboard 38 and display 29. Fig. 3 illustrates an exemplary computer

screen containing a plurality of typical elevator parameters listed in Table II. The parameters which the user can set the current values of are enclosed in rectangles. The particular elevator controller uses the current values in determining certain elevator status conditions. These values are communicated by the computer 10 over the communication link 12 to the particular elevator controller when the monitoring program is entered.

Once the system configuration is complete, the monitoring program is entered wherein the enhanced elevator diagnostic information can be extracted from any of the computer-based elevator controllers 14-21 connected to the computer 10. The information is normally communicated to the computer at five hundred millisecond intervals. This transmission rate is strictly exemplary.

TABLE II

5	<u>Parameter</u>	<u>Definition</u>
10	POR Message Enable	If enabled, an alarm is generated whenever car is powered up.
15	Event Buffer with Alert	If you enter "Y", the program will save the event buffer associated with each alert generated.
20	Nudge Threshold	Maximum allowable number of consecutive runs in which nudging is initiated. If this number is exceeded, a front door or rear door alert is generated.
25	Excessive Door Close Cycles	Maximum allowable number of instances of excessive door close time. If this number is exceeded, a front door or rear door alert is generated.
30		
35	Alert Threshold	Maximum allowable number of occurrences of any one alert. If this number is exceeded, an alarm is generated.
40		
45	One-Floor Run	Maximum time allowed for Time monitored one-floor run from "start landing" to "end landing". If time exceeds given value, an alert will be generated.
50		
55		

TABLE II

5	<u>Parameter</u>	<u>Definition</u>
10	One-Floor Run Start Landing	Start landing for monitored one-floor run.
15	One-Floor Run End Landing	End landing for monitored one-floor run.
20	F Door Close	Maximum time allowed for the front doors to close. If actual time exceeds this limit, the Excessive Front Door Close counter is incremented.
25	R Door Close	Maximum time allowed for the rear doors to close. If actual time exceeds this limit, the Excessive Rear Door Close counter is incremented.
35	F Door Open	Maximum time allowed for the front doors to open. If actual time exceeds this limit, an alert is generated.
40	R Door Open	Maximum time allowed for the rear doors to open. If actual time exceeds this limit, an alert is generated.
45		
50		
55		

TABLE II

5

10

15

20

25

30

35

40

45

50

55

ParameterDefinition

Deceleration

Maximum time allowed for a hydraulic elevator to make a stop. If this time is exceeded, an alert is generated.

F Door Cycle

Maximum time allowed for the front doors to go through a complete cycle of operation. If actual time exceeds this limit, an alarm is generated.

R Door Cycle

Maximum time allowed for the rear doors to go through a complete cycle of operation. If actual time exceeds this time, an alarm is generated.

Run Cycle

Maximum time allowed for car to complete a run. If actual run time exceeds this limit, an alarm is generated.

No Car Response

Maximum time allowed for clearance of a static door failure (i.e., failure of doors to open, failure of hoistway door interlocks to make, or door-related software shutdowns). If trouble is not cleared within the timer limit, an alarm is generated.

TABLE II

5

<u>Parameter</u>	<u>Definition</u>
10 Emergency Button	Maximum time allowed for "No Car Response" if the in-car Emergency Stop button is pushed when initial problem is detected.
15 Group Comm	Maximum time allowed from Delay detection of a group communication failure, until 20 failure is cleared. If trouble is not cleared within the timer limit, an alarm is generated. 25

After entering the monitoring program, a main menu appears on the display screen 29, as illustrated in Fig. 4. This menu lists the options available to the operator for extracting, recording, or conveying enhanced elevator diagnostic data. The software for the computer 10 is designed such that most selections are entered with single keystrokes. For example, upon initially entering the monitoring program, the user typically depresses the function key "F1" in order to select, from a list that appears on the screen, the desired site configuration file developed hereinbefore in the configuration program. This single keystroke entry facilitates ease of operation.

After the user has chosen the proper site configuration file, program operation is returned to the main menu. At this point, the user typically extracts data from an elevator controller by one of two methods: if the currently stored historical data in the elevator controller may be of some value in diagnosing a reported problem (e.g., due to an elevator malfunction reported by building personnel), then the user selects "F3" in order to poll the elevator control system (ECS) for such information; if the meaning of the data is unknown (of no interest), then the user selects "F2" in order to "flush" (erase) data from the controller. After selecting the flush option, the user can either save the flushed data on the floppy disk portion of the storage means 36 for future interpretation or the data can be discarded. Also in the flush option, the number of alarm or alert conditions received for each elevator car controller from which data is flushed is indicated on the display 29.

If it is desired to poll the system for current data (i.e., real time operation), the user should first flush the elevator controller of stored data and then begin polling the controller for current data. As a result of the polling operation, the screen displays the various operational functions (e.g., mode, motion, status of emergency button, car position, group status, etc.) of the polled elevator car, and will indicate whether alarms or alerts exist for the car. Data transmitted from an elevator controller to the computer 10 during the polling operation is saved in the storage means 36 for further interpretation, if desired.

The elevator controller communicates the contents of the controller event buffer to the computer 10 if the result of either the polling or flush operations indicate alarm or alert conditions. Fig. 5 illustrates a computer screen of the typical contents of a controller event buffer as a result of an alarm or alert condition. Listed are the latest to occur state changes of a number of typical elevator parameters that are monitored by the elevator controller.

Once the contents of the elevator controller have been either flushed or polled and subsequently saved in the storage means 36, the user is presented with several options for viewing the resulting saved data. By selecting option "F5" from the main menu, the user can display the various types of information transmitted

by an elevator controller to the computer 10. For example, either alarms, alerts, and event buffers or, alternatively, performance data can be displayed on the display 29, or routed to the printer 32 for a hard copy printout. The computer screen (Fig. 5) illustrating event buffer contents associated with resultant alarm or alert conditions has been discussed hereinbefore. However, it is also possible to display the contents of the event buffer regardless of the presence of alarms or alerts. This saves time in that it allows one event buffer for one car controller to be displayed without first performing either the flush or poll procedure and paging through the resulting event buffers for the data associated with each car controller.

As a second option, the user can display alarms or alerts together with corresponding causes for either the alarm or alert. Fig. 6 illustrates a computer screen associated with an alarm display along with an optional detailed description of the alarm and the possible causes for it. The display for the alert condition is similar.

Also, the user can display elevator performance data collected during polling. Performance data associated with any elevator car is normally saved at the end of the polling session. Fig. 7 illustrates a computer screen associated with typical elevator performance data collected during polling of the elevator controller. As with alarms, alerts, and event buffers, performance data can also be printed out.

The software which controls the primary computer functions of communicating with the elevator controllers 14-21 over the communication link 12, communicating with the printer 32 via either an RS232 serial interface or a Centronics parallel interface, interacting with the user via the keyboard 38, storing the signals indicative of enhanced elevator diagnostic information in memory 36, and processing the display screens of the display 29 is implemented in a well-known manner that should be readily apparent to those skilled in the art in light of the teachings presented herein. A manufacturer such as IBM makes available to the public information regarding the interfacing with the computer's disk operating system (DOS) software for performing functions such as those enumerated above. The computer software that interfaces with the IBM DOS can be written in a designer's choice of a variety of commonly-available computer languages (e.g., Pascal, C, Assembler, etc.) made available either by IBM itself or one of a variety of third-party vendors.

Although the present invention has been described in detail in connection with the method and apparatus for monitoring an elevator as embodied in a computer-based elevator controller and disclosed in the aforementioned Coste et al patent, it is to be understood that the present invention can be utilized in any type of elevator system which normally operates sequentially from state to state in a closed loop sequential chain of linked normal operating states, which system determines the identity of an operating state by detecting the satisfaction of a criterion defining a transition from an immediately preceding operating state or to an immediately succeeding operating state by detecting the system parameter signal state or states, alone or in combination, of one or more sensed system parameter signals defining the satisfied transition criterion, each criterion indicating either a transition to a normal operating state in the chain or to an abnormal operating state, and which system provides selected message signals in the presence of corresponding selected transitions.

As described, the communication link between the computer 10 and a plurality of elevator controllers 14-21 is implemented with the well-known RS422 communications protocol.

However, any serial or parallel communications protocol can be used; the choice of protocol depends on criteria such as the physical environment and communication interfaces available on the system controllers and computers. Also, an IBM laptop personal computer is used to extract, record and convey the enhanced elevator diagnostic information from eight elevator controllers. However, any number of elevator controllers can be interconnected to any one of a number of well-known types of commercially available computers. Also, it is possible for one skilled in the art to design and build the apparatus of the present invention using commonly-available electronic components, or even custom-designed components such as gate arrays or programmable logic devices.

Although the invention has been illustrated and described with respect to exemplary embodiments thereof, it should be understood by those skilled in the art that the foregoing and various other changes, omissions and additions may be made therein and thereto, without departing from the scope of the invention.

Claims

1. Apparatus for use with an elevator system having at least one car, comprising:
for each elevator car, signal processing means for monitoring the states of a plurality of two-state parameter signals indicative of a corresponding plurality of elevator parameters, said signal processing means

- determining the identity of an elevator operating state for an elevator car which normally operates sequentially from state to state in a closed loop sequential chain of linked normal operating states by detecting the satisfaction of a transition criterion defining a transition from an immediately preceding operating state or to an immediately succeeding operating state by detecting the parameter signal state or states, alone or in combination, of one or more sensed parameter signals defining the satisfied transition criterion, each criterion indicating either a transition to a normal operating state in the chain or to an abnormal operating state, and for providing selected message signals in the presence of corresponding selected transitions;
- for each elevator car, an event buffer, responsive to a selected number of the latest to occur of selected parameter signal state changes, for storing state change signals indicative of said latest parameter signal state changes, said event buffer being responsive to said selected message signals for providing related buffer message signals corresponding to said stored state change signals;
- for each elevator car, communication means, responsive to said selected message signals provided by said signal processing means, for transmission thereof, and responsive to said buffer message signals provided by said event buffer, for transmission thereof;
- characterized by:
- monitor communication means, responsive to each of said elevator car communication means, for decoding said transmitted selected message signals and providing decoded signals indicative thereof, and for decoding said transmitted buffer message signals and providing decoded signals indicative thereof;
- user input means for providing signals indicative of parameter limit values corresponding to parameter value transition criterion for said plurality of parameters monitored by each one of said elevator car signal processing means;
- display means responsive to said monitor signal processing means;
- monitor signal processing means, responsive to said monitor communication means, for providing signals indicative of said decoded selected message signals to said display means for display in a predetermined form, and for providing signals indicative of said decoded buffer message signals to said display means for display in a predetermined form, said monitor signal processing means being responsive to said user input means for providing signals indicative of said parameter limit value signals to said display means for display in a predetermined form, and for providing said signals indicative of said parameter limit value signals to said monitor communication means for transmission.
2. The apparatus of claim 1, wherein said user input means comprises means for providing keyboard input of said plurality of signals indicative of parameter limit values corresponding to parameter value transition criterion for said plurality of parameters monitored by each one of said elevator car signal processing means.
3. The apparatus of claim 1 or 2, wherein said monitor signal processing means comprises means, responsive to said monitor communication means, for storing signals indicative of said decoded selected message signals and for storing signals indicative of said decoded buffer message signals.
4. The apparatus of claim 1, 2 or 3 wherein said monitor communication means comprises means, responsive to said monitor signal processing means, for providing signals indicative of said selected message signals to a hardcopy printout device for printout in a predetermined form, and for providing signals indicative of said buffer message signals to a hardcopy printout device for printout in a predetermined form.

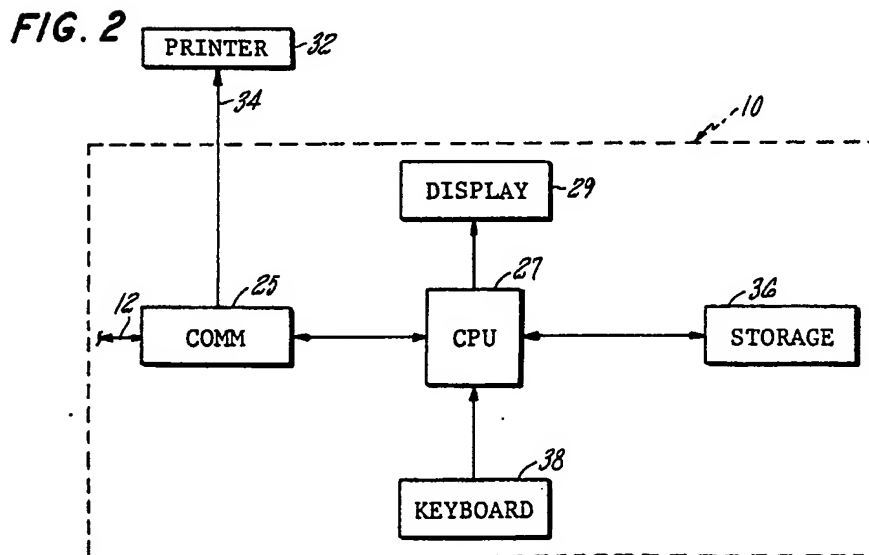
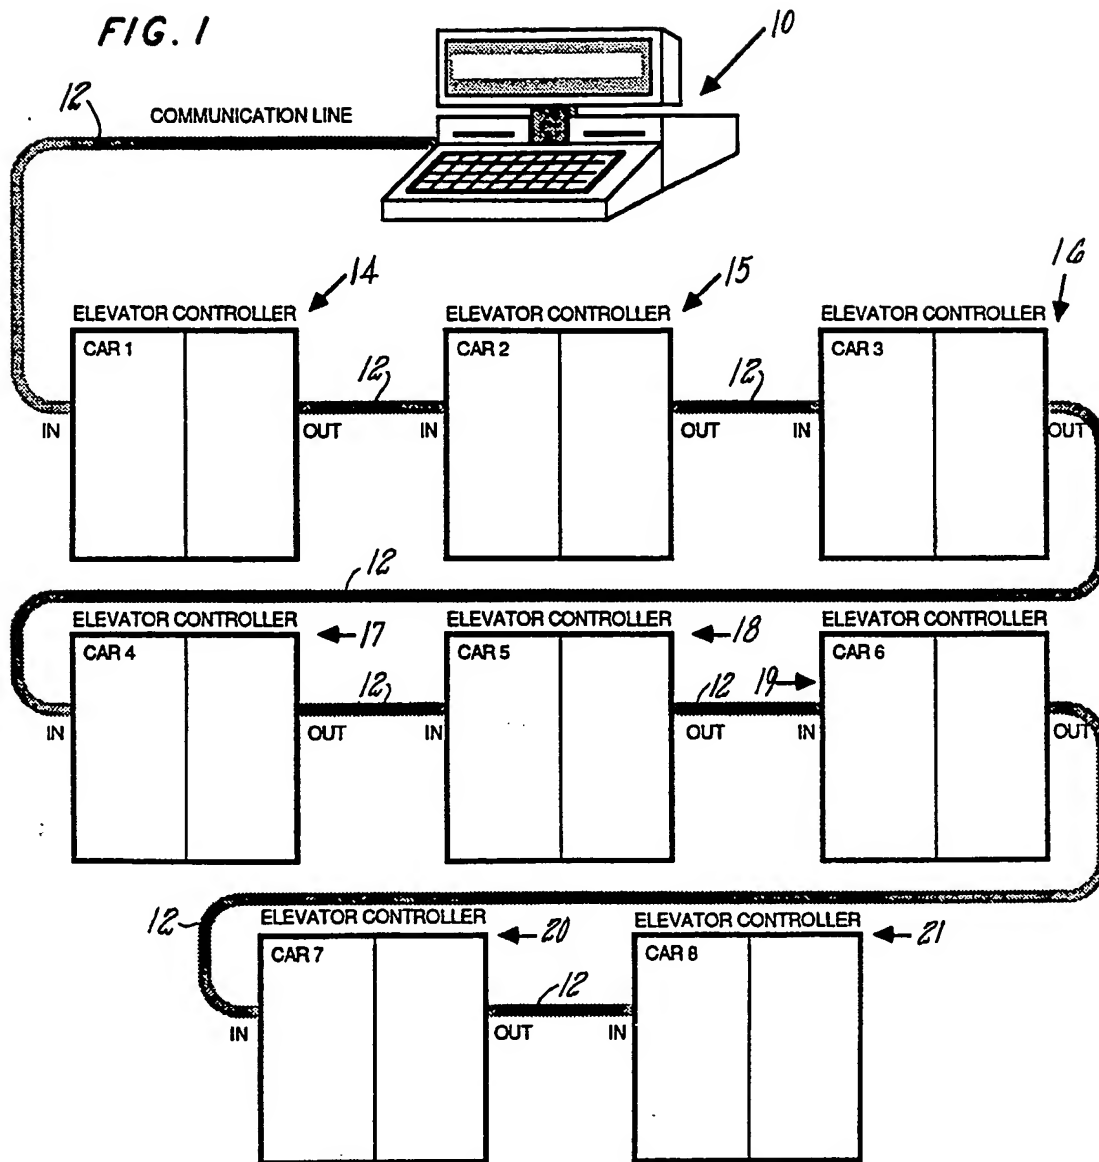


FIG. 3

CAR ID 702696	
POR MESSABLE ENABLE (YES=1, NO=0)	0
EVENT BUFFER W/ALERTS (YES=1, NO=0)	1
NUDGE THRESHOLD	4
EXCESSIVE DOOR CLOSE CYCLES	5
ALERT THRESHOLD	4
ONE-FLOOR RUN: TIME	15
SEC	1
START LANDING	2
END LANDING	2
TIMER LIMITS (ALL VALUES IN SECONDS):	
F DOOR CLOSE	10
R DOOR CLOSE	10
RUN CYCLE	120
F DOOR OPEN	10
R DOOR OPEN	10
DECELERATION	10
F DOOR CYCLE	140
R DOOR CYCLE	240
EMERG. BUTTON	120
NO CAR RESPONSE	240
GROUP COMM DELAY	260

FIG. 4

<div>CAR MONITORING SYSTEM</div>		SITE: DEFAULT THIS IS THE DEFAULT SITE FILE.	
Thu 4-JUN-1987 1:00:00 PM		BLDG: SHERLOCK	
F1 : SELECT SITE CONFIGURATION FILE		PRINT INCOMING MESSAGES	
F2 : FLUSH SYSTEM OF STORED INFORMATION		SF1 : ENABLED	
F3 : POLL ECS FOR INFORMATION		REQUEST PERFORMANCE DATA	
F4 : REQUEST EVENT BUFFER FROM ECS		SF1 : ENABLED	
F5 : DISPLAY SAVED INFORMATION FILES			
F6 : DELETE INFORMATION FILES FROM DISK			
F7 : UPDATE DATA DISK SPACE			
F8 : FORMAT NEW DATA DISK			
F9 : RESET PRINTER			
F10: SHOW CONFIGURATION FILE INFORMATION			
CTRL END : EXIT CAR MONITORING SYSTEM			
SYSTEM STATUS : WAITING FOR USER INPUT...		REMAINING DISK SPACE : 100%	

FIG. 5

EVENTS -- SITE: TRUMPC CAR: 1 BLDG: NPA80656 15:20 07-17-1987
 CODE: 219 Elevator Type: ELEVONIC

*MLS 20	MLS21	DFO make	*Drop DO	DFO break
FDoor closing	*Run off	*MLS 3	MLS 4	MLS 5
MLS 6	*MLS 8	DST on	*DFC make	GDS on
*FDoor closed	RUN on	IDZPPT off	MLS 10	*ODZ off
SP 5	*SCC on	SP 6	*SP 7	Pull DO
*ODZ on	DFC break	DST off	*IDZPPT on	*FDS off
MLS 14	*MLS 20	DFO make	*MLS 21	Drop DO
*DFO break	*FDoor closing	RUN off	MLS 3	*MLS 4
MLS 5	*MLS 6	MLS 9	*dfc make	*DST on
GDS on	FDoor closed	*RUN on	*MLS 11	IDZPPT off
*ODZ off	SP 6	*SCC on	SP 5	*SP 4
Pull DO	ODZ on	*IDZPPT on	DFC break	*GDS off
MLS 15	*DST off	DST on	*MLS 20	MLS 21
*Stop car	*MLS 0	RUN off	Lev down on	DFO make
*Drop DO	Pull DO	*DODIS on		

FIG. 6

CODE: 112 SITE: TRUMPC CAR: 1 BLDG: NPA89656 15:21 07-17-1987

Car not responding at landing: 4.

Car motion INHIBITED. MODE 13. BNP ON.

CODE 112: ELEVATOR NOT RESPONDING TO MOTION COMMANDS

A. EXPLANATION: Elevation disposition determined from processor inputs: inductors, software signal safe (car motion inhibited is safe = 0, software commands to UMV, ULV, DMV, DLV, and/or door open command.

B. CAUSES: 1. If elevator running down when problem occurs and condition resolves in short time, check for pump motor stuck on. Excessive deceleration time alert may precede alarm during this condition.

2. If stall protection or car motion inhibited check: hoistway lock, TES, PES, EEC, GS not made, DR relay coil, plunger steadier switch, low oil switch and/or L4S, L6S, L8S.

(ELEVONIC)

1. Door operators
2. Safety chain
3. Loss of building power
4. Door locks not making or LVCL23 not breaking if GDSFLG is on
5. Software signal safe=0 for period of time.

PRESS SPACEBAR TO EXIT EXPLANATION

FIG. 7

DATA -----	SITE: TRUMPC	CAR: 1	BLDG: NPA80656	15:21 07-17-1987
Front door operations.....	000004	Rear door operations.....	000000	
Front door reversals.....	000001	Rear door reversals.....	000000	
Front door nudges.....	000000	Rear door nudges.....	000000	
Front door long close cycles..	000000	Rear door long close cycles..	000000	
Number of runs.....	000004			
Demand minutes.....	000002			
Running minutes.....	000001			
Relevets.....	000001			
Time on independent service...	000000			
THE FOLLOWING APPLIES TO ELEVONIC ELEVATORS				
Light runs up.....	000002	Light runs down.....	000002	
Partial runs up.....	000000	Partial runs down.....	000000	
Full runs up.....	000000	Full runs down.....	000000	
Low AC runs.....	000000			



EP 89 30 8837

DOCUMENTS CONSIDERED TO BE RELEVANT			
Category	Citation of document with indication, where appropriate, of relevant passages	Relevant to claim	CLASSIFICATION OF THE APPLICATION (Int. Cl.5)
Y	US-A-4698780 (MANDEL ET AL) * column 4, line 51 - column 5, line 2 * * column 8, line 1 - column 9, line 8; figures 7-9 *	1-4	B66B5/00
Y	US-A-4512442 (MOORE ET AL) * column 6, line 64 - column 7, line 35 * * column 10, lines 48 - 62; figures 1-3 *	1-4	
A	US-A-4418795 (TROSKY ET AL) * column 7, line 56 - column 8, line 51 * * column 11, line 43 - column 12, line 20; figures 1-3, 7-9 *	1, 2, 4	
A	US-A-4491198 (NODA ET AL) * column 3, lines 4 - 24; figure 2 *	1	
A	EP-A-0146412 (OTIS ELEVATOR COMPANY) * claim 1; figures 1, 2 *	1	
			TECHNICAL FIELDS SEARCHED (Int. Cl.5)
			B66B G05B
The present search report has been drawn up for all claims			
Place of search THE HAGUE		Date of completion of the search 18 JANUARY 1990	Examiner CLEARY F.M.
CATEGORY OF CITED DOCUMENTS X : particularly relevant if taken alone Y : particularly relevant if combined with another document of the same category A : technological background O : non-written disclosure P : intermediate document T : theory or principle underlying the invention E : earlier patent document, but published on, or after the filing date D : document cited in the application I : document cited for other reasons & : member of the same patent family, corresponding document			